


On the underneath of the boom, you will find a plastic screw and washer. This protects a ¼ inch screw UNC socket (Standard camera mount) that can be used to fit third party hand grips, tripods, etc. If not being used, we suggest you leave the plastic screw in place to reduce moisture and dirt ingress.

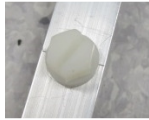

NOTE: If you wish to dis-assemble the antenna for storage, please note the Reflector (Blue) and Director (Red) elements DO NOT unscrew like the driver (Green) elements. They are one piece and CAN ONLY be removed by unscrewing the fixing screw.



For technical support please contact Lotek UK.
+44 (0)1929 552992 or email info.uk@lotek.com

Lotek



AVIAN



TERRESTRIAL




MARINE



FRESHWATER

LiteFlex Yagi Assembly Instructions

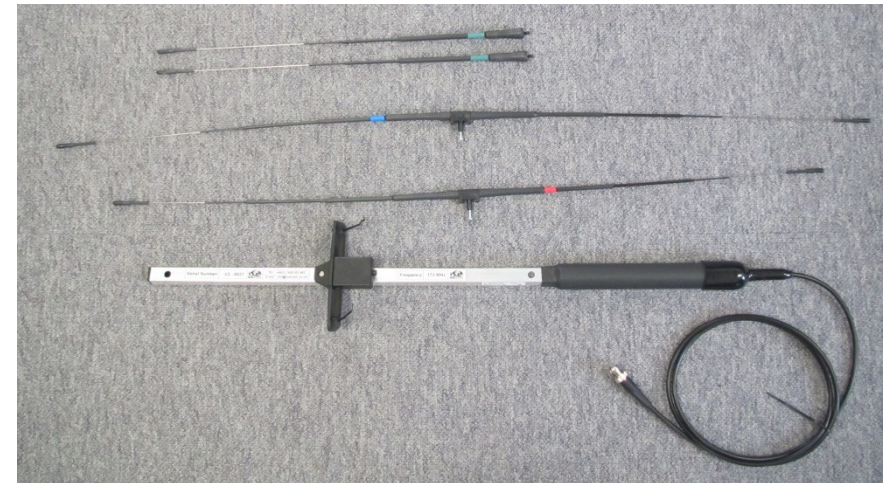

The new LiteFlex flexible Yagi is shipped in a disassembled state to reduce packaging. Carefully unpack the box which should contain the following:

- 1 x Main boom
- 1 x Reflector Element (Blue Marker) – Longest
- 1 x Director Element (Red Marker) – Shortest
- 2 x Driver Elements (Green Marker)
- 1 x Antenna cable.


Take the flexible Reflector Element (Blue), undo the (Crosshead) screw, Take the Boom and clip the Element into the large hole near the handle. It should click into position. Turn the boom over and fix the element in place using the screw.



Repeat the process with the flexible Director (Red) element that is fixed to the boom at the opposite end to the handle.




There are two Driver elements (Green) that are screwed into either side of the small black box. Note: These should only be screwed in finger tight. To provide extra protection to the driver element fixing, a plastic guard is now fitted to the boom.

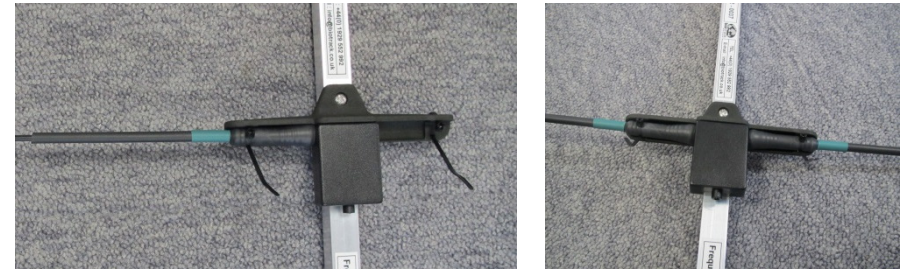

Once you have screwed both driver elements to the box, tighten up the cable ties for extra security (but not too tightly). If you are planning to disassemble the antenna you may wish to keep the tie undone or purchase additional cable ties.

The Yagi is now complete as in the picture below.

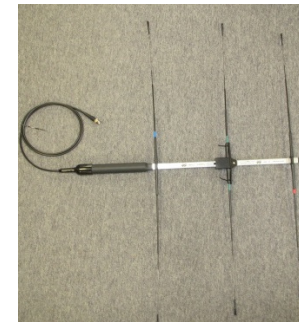

The Cable is normally delivered attached to the Antenna. However, if it is not attached or needs to be replaced, then holding the Yagi handle, carefully screw the TNC connector of the cable (next to the rubber shroud) into the female TNC socket fitted in the handle end until finger tight. Carefully push up the shroud over the end of the handle (Do not pull down on the antenna cable).

