

Pippyg2 Bat Bag



Document version "1.0"

Apodemus Field Equipment

Dorpstraat 38a 5563 BD Westerhoven - The Netherlands
T +31 85 7500 699 E info@apodemus.eu W www.apodemus.eu

VAT NL 8525 86 115 B01

IBAN NL17 TRIO 0198 3502 79

BIC TRIONL2U

Trade register 14081365

KvK 57452598

Manual

The Pippyg Bat Bag is a protective cover for your Pippyg. It protects the Pippyg from rain and wind. What's more, you can easily secure the Pippyg to a high point, for example using a lashing strap.

To start using the Bat Bag, you need to:

- Attach the horn using the supplied fittings
- Insert the batteries and memory card into the Pippyg
- Fit the Pippyg into the Bat Bag

Note:

This manual is for the Pippyg 2.
It applies to Pippygs with serial numbers PP2611001 and above.

A different manual is available for older Pippygs.




Fitting the horn

1. Required materials

The horn (1) must be fitted together with the membrane (2) and the sticker (3) in front of the microphone (4). The pack includes three screws (5) for this purpose.


You will need a small Phillips screwdriver to fit the three screws.

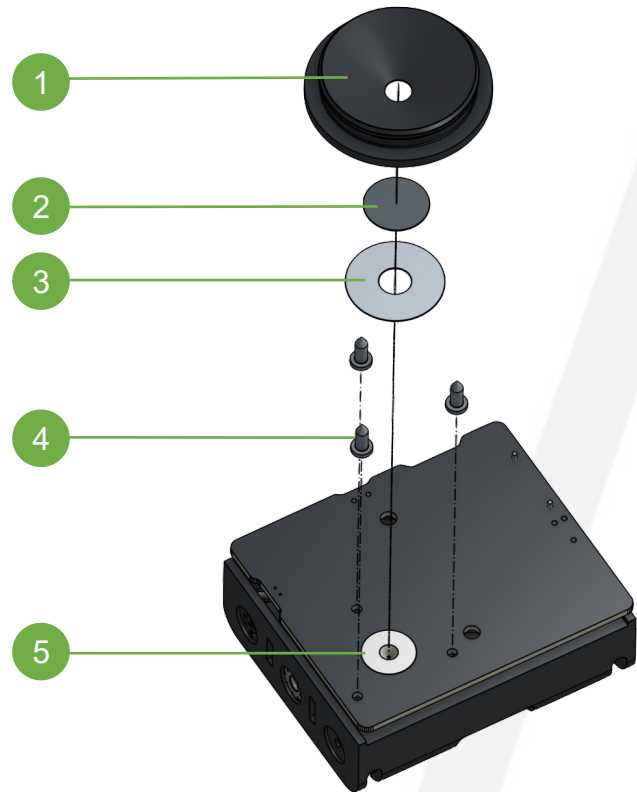

2. Preparing the horn

To protect the microphone from dust and water, the membrane must be fitted to the horn.

1. Place the membrane (2) on the back of the horn (1)
2. Attach the membrane to the horn using the sticker (3)
3. From the front, only the membrane should be visible, not the sticker

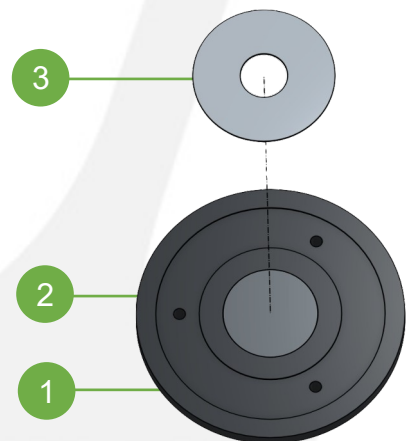

3. Fitting the horn

1. Unscrew the two screws from the battery compartment



2. Bend the circuit board away from the battery holder until it is in the position shown opposite
3. You can now screw the assembled horn onto the circuit board using the three screws provided
4. Bend the circuit board back over the battery compartment
5. Reattach the screws on the battery compartment



Getting started

You can find out how to use the Pippyg (including how to insert the batteries and memorycard) in the accompanying user manual.



About the Pippyg2 Bat Bag

Apodemus helps you to experience and document nature.

We believe that a healthy natural environment is important. That's why we strive to act in an environmentally responsible way. This Bat Bag, for example, is made in the Netherlands using recycled materials wherever possible. What's more, the Bat Bag helps ensure that the Pippyg lasts a long time, so you can enjoy your purchase for years to come.