



## USER MANUAL

### CELLULAR TRAIL CAMERA


#### Models:


LINK-EVO

LINK-EVO-V

LINK-W

 [support.spypoint.com](https://support.spypoint.com)

 [support@spypoint.com](mailto:support@spypoint.com)

 1-888-779-7646

v1.3






## THANK YOU FOR CHOOSING A SPYPOINT PRODUCT.

This manual will guide you through all the features of your device so that you will get optimal use out of your SPYPOINT product. We strive on offering all customers a positive, user friendly experience that will have a lasting impression.

## JOIN THE SPYPOINT COMMUNITY

 [facebook.com/SPYPOINT](https://facebook.com/SPYPOINT)

 [twitter.com/SPYPOINTcamera](https://twitter.com/SPYPOINTcamera)

 [youtube.com/SPYPOINTtrailcam](https://youtube.com/SPYPOINTtrailcam)



## ABOUT US

Our passion and commitment to the hunting industry has highly contributed to our success story. We are very proud of the path our home grown company has taken and very grateful for every opportunity we have had. Quality, personalized service and support were the foundation for us and we continue to pursue this rule of thumb as our business grows.

Team work is the most important word for us at SPYPOINT and is the key to our innovations and constant progress. A company is only as successful as its communication and team efforts. We are forever thankful to the team that supports us on a daily basis but furthermore we are honored to have such talented and committed individuals to call our SPYPOINT family.

<b>Components</b> .....	<b>4</b>
<b>Specifications</b>	
LINK-EVO & LINK-EVO-V .....	<b>6</b>
LINK-W .....	<b>7</b>
<b>Power</b> .....	<b>8</b>
<b>Memory card &amp; Busy LED</b> .....	<b>9</b>
<b>Getting started</b> .....	<b>10</b>
<b>EVO software: Configuration &amp; diagnosis tool</b> .....	<b>11</b>
<b>SPYPOINT LINK App</b> .....	<b>12</b>
<b>Installation &amp; Mounting bracket</b> .....	<b>15</b>
<b>File transfer to a computer</b> .....	<b>16</b>
<b>Available accessories</b> .....	<b>17</b>
<b>Troubleshooting</b> .....	<b>18</b>
<b>Warranty &amp; Repair</b> .....	<b>20</b>
<b>Regulation</b> .....	<b>21</b>

# Components

# LINK-EVO



- 1 Antenna
- 2 LEDs
- 3 Photo lens
- 4 Light sensor
- 5 Test light
- 6 Signal meter
- 7 ON / OFF Switch
- 8 SD card slot
- 9 Fresnel lens
- 10 Battery case & Micro SIM card reader
- 11 Slot for installation strap
- 12 Locking latch
- 13 Cable lock hole
- 14 12V jack
- 15 Tripod mount
- 16 Battery door push button

# Components

1	Antenna	Allows cellular wireless communication.
2	LEDs	Night lighting to obtain black and white photos and videos.
3	Photo lens	Image sensor and infrared filter.
4	Light sensor	Detects the lighting conditions: color by day and infrared by night.
5	Test light	Flashes 30 seconds in PHOTO/VIDEO mode to allow the user to leave without being photographed or recorded.
6	Signal meter	Indicates the signal strength of the cellular network or a connection error if you see only one signal bar flashing. (see p.9)
7	On-Off Switch	Allows the user to turn on/off the camera.
8	SD card slot	An SD card is required to record photos/videos
9	Fresnel lens	Expands the detection area and increases the sensitivity of the camera's motion sensor.

10	Battery case	Case for AA batteries or a rechargeable lithium battery pack.
	Micro SIM card slot	A micro SIM card is required for cellular functions. (included)
11	Slot for installation strap	Allows the user to install the camera using the installation strap included.
12	Locking latch	Allows access to the front control of the camera.
13	Cable lock hole	Allows the user to install a CL-6FT cable lock, sold separately.
14	12V power jack	This camera can be powered from an external 12-volt DC input such as a 12V battery or a 12V adapter, each sold separately.
15	Tripod mount	Standard ¼-20" tripod mount.
16	Battery door push button	Allows you to access the battery compartment.

## LINK-EVO & LINK-EVO-V

### Cellular transmission

Frequency	LINK-EVO: 4G LINK-EVO-V: 4G (Verizon network)
Photo transmission	Wireless photo transmission via the free, SPYPOINT LINK App with a SPYPOINT plan. For more information, please visit the link below.  <b>WWW.SPYPOINT.COM/PLANS</b>
Configuration of the camera	Fully configurable remotely through the free SPYPOINT LINK App.

### Photo recording

Photo resolution	12 MP
File format	JPG
Time lapse mode	Intervals from 3 min to 24h
Multi-shot mode	Up to 2 photos per detection
Stamp	Date, time, temperature (°C/°F) and moon phase
Capture mode	Color by day, infrared black and white by night

### Video recording

Video resolution	1280 x 720 (HD 720p)
File format	AVI
Sequence length	Adjustable from 10 to 90 s
Stamp	Date, time, temperature (°C/°F) and moon phase
Capture mode	Color by day, infrared black and white by night

### Audio

Sound recording	No
-----------------	----

### Memory storage

Support	<ul style="list-style-type: none"> <li>•Internal memory: none</li> <li>•External memory : SD/SDHC card (up to 32 GB)</li> </ul>
---------	---

### Power sources

Alkaline or lithium batteries	8 x AA
Lithium battery pack	Rechargeable battery pack (LIT-09/LIT-C-8)
External (12V jack)	12V battery (KIT6V-12V, KIT-12V, BATT-12V) or 12V adapter (AD-12V)

### Detection system

Motion sensor	PIR
Detection angle	40°
Detection distance	Up to 80 ft
Trigger speed	0.3 sec
Delay between each detection	Adjustable from Instant to 30 min

### Night time illumination system

LEDs	42 LEDs
Flash range	Up to 90 ft
Exposure	Automatic infrared level adjustment

### Optical field of view

40°

### Dimensions

3.8" W X 6.9" H X 3.9" D

### Recommendations

Operating temperature	(-30 °C to + 50 °C) (-22 °F to +122 °F)
Storage temperature	(-40 °C to + 60 °C) (-40 °F to +140 °F)

## LINK-W

### Cellular transmission

Frequency	LINK-W: 4G
Photo transmission	Wireless photo transmission via the free, SPYPOINT LINK App with a SPYPOINT plan. For more information, please visit the link below.  <b>WWW.SPYPOINT.COM/PLANS</b>
Configuration of the camera	Fully configurable remotely through the free SPYPOINT LINK App.

### Photo recording

Photo resolution	10 MP
File format	JPG
Time lapse mode	Intervals from 3 min to 24h
Multi-shot mode	Up to 2 photos per detection
Stamp	Date, time, temperature (°C/°F) and moon phase
Capture mode	Color by day, infrared black and white by night

### Video recording

Video resolution	1280 x 720 (HD 720p)
File format	AVI
Sequence length	Adjustable from 10 to 90 s
Stamp	Date, time, temperature (°C/°F) and moon phase
Capture mode	Color by day, infrared black and white by night

### Audio

Sound recording	No
-----------------	----

### Memory storage

### Support

- Internal memory: none
- External memory : SD/SDHC card (up to 32 GB)

### Power sources

Alkaline or lithium batteries	8 x AA
Lithium battery pack	Rechargeable battery pack (LIT-09/LIT-C-8)
External (12V jack)	12V battery (KIT6V-12V, KIT-12V, BATT-12V) or 12V adapter (AD-12V)

### Detection system

Motion sensor	PIR
Detection angle	40°
Detection distance	
Trigger speed	0.5 sec
Delay between each detection	Adjustable from Instant to 30 min

### Night time illumination system

LEDs	42 LEDs
Flash range	Up to 80 ft
Exposure	Automatic infrared level adjustment

### Optical field of view

40°

### Dimensions


3.8" W X 6.9" H X 3.9" D

### Recommendations


Operating temperature	(-30 °C to + 50 °C) (-22 °F to +122 °F)
Storage temperature	(-40 °C to + 60 °C) (-40 °F to +140 °F)

## POWER SOURCES


### AA BATTERIES

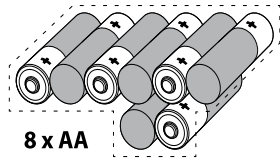

This camera can be powered by 8 AA batteries (1.5V). The use of alkaline or lithium batteries is recommended.


 To ensure maximum performance of the camera and prevent battery leaks, we recommend the use of new batteries. Make sure to insert each battery with the correct polarity. (Negative or flat end against the metal spring plate) Do not mix battery type - use ALL alkaline or ALL lithium. Do not mix old and new batteries. Rechargeable AA batteries are not recommended as the lower voltage can cause operational issues.

### LITHIUM BATTERY PACK

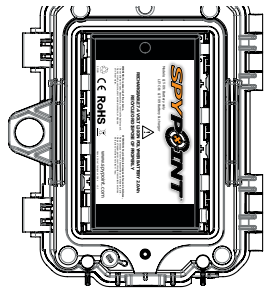

This camera can be powered by a rechargeable lithium battery pack LIT-09/LIT-C-8 (sold separately). This type of battery is less affected by cold temperatures and lasts up to 2 times longer than alkaline batteries.

### EXTERNAL (12V)

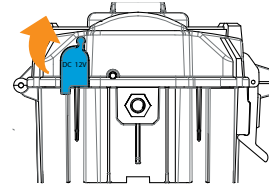

This camera can also be powered by an external 12-volt DC input such as a 12-volt battery (KIT-12V, BATT-12V or KIT6V/12V) or a 12-volt adapter (AD-12V), sold separately.



# Memory card / "BUSY" LED

## MEMORY CARD

A memory card is required to record photos and videos. The camera is compatible with SD/SDHC memory cards, up to 32 GB capacity (sold separately).

When the camera is turned on and no memory card is used, the camera screen displays "Insert Memory Card".

Here is a table of the approximate number of photos and length of videos that can be recorded with different memory card capacities. Many photo and video resolutions are noted, see those corresponding to the camera.

**Note:** This SPYPOINT camera is equipped with continuous file recording. When the memory card is full, the camera will continue to record photos or videos by deleting the first recorded files.

	4 GB	8 GB	16 GB	32GB
Photo				
12 MP	1600	3200	6300	12600
Video				
1280 x 720	40 min	1h20	2h40	5h20

## INSERTING THE MEMORY CARD

Before inserting or removing a memory card, always turn off the camera to prevent loss or damage of the photos already recorded. Also make sure that the switch on the side of the card is not in the LOCK position.

Insert an SD/SDHC memory card (up to 32 GB capacity) in the card slot with the label side facing upward. The card is inserted correctly when a click is heard.



**!** We suggest to format your SD card if it's been in another electronic device to make sure you will have the maximum capacity of your memory card.

## REMOVING THE MEMORY CARD

Lightly press the memory card into the camera once to pop it out of the slot and remove it.

## BUSY LED

The BUSY light is located at the back of the camera. It is a diagnostic tool. It lights up when the camera starts, when the camera records a file and in TEST mode at the same time as the test light (located in front of the camera).



# Getting started

## INSTALL THE FREE SPYPOINT LINK APP

The SPYPOINT LINK App lets you connect and control your camera remotely using a smartphone or tablet. Features include viewing your camera status, pictures, full control of the camera settings and more.

### Install the free App

1. Make sure you have a data package with either your smartphone or tablet or a Wifi connection.
2. To install the App, you can either:
  - Get it on Google Play™ (*Google Play is a trademark of Google Inc*)
  - Download on the App Store™ (*App Store is a trademarks of Apple Inc.*)
3. Search for the SPYPOINT LINK App from SPYPOINT.
4. Install the App on your smartphone or tablet.

## Run the SPYPOINT LINK APP

Start the app and it will walk you through a few questions. The SIM ID number can be found in the battery case. You will need this number to complete the registration of the LINK-EVO camera and connect to the application.



Press the button at the bottom of the screen once you have finished. You will then receive an email confirming the activation.

## SETTING THE APP

The SPYPOINT App lets you configure all your settings of the camera. These new settings will take effect the next time the camera connects to update its status.


## START THE CAMERA

We suggest to format your SD card if it's been in another electronic device to make sure you will have the maximum capacity of your memory card.

### 1. Turn the camera ON


Use the ON/OFF switch to turn the camera ON.

### 2. All lights flashing - Searching for signal




The signal search can take a few minutes. If you only see 1 bar flashing, the network test was unsuccessful. Move outside or get near a window and re-start the camera a few times if needed, be to connected to the cell network.

Note: If you still only see 1 bar flashing, you will need to run the EVO software shown on p.10 to see the diagnosis messages. You will only see a diagnosis message if the camera was not able to connect to the LINK app.



### 3. Number of lights - signal strength



Once the network test is completed, you will see the signal strength in signal bars. Note that the signal bars on a LINK-EVO might not be equal to your other cellular devices as there's no industry standard and practice to label dBm values to a specific number of bars.

### 4. Red light flashing (30 s) - Installation delay


The test light in front of the camera will flash for 30 seconds to allow the user to leave the area without being photographed or recorded.

### 5. All lights OFF - Camera ready

The camera has updated its status in the LINK app with the latest informations. The camera is now ready to take pictures and transmit them to your LINK app upon the next synch. Synchs are set by default to every 4 hours starting at midnight.

# EVO software: Configuration & diagnosis tool

# LINK-EVO

 Insert a new SD card into the camera. Then, turn the camera on and a copy of the EVO software will be saved automatically onto the memory card.

## CONFIGURATION & DIAGNOSIS USING THE EVO SOFTWARE

1. Remove the memory card from the camera.
2. Insert the memory card into a computer.
3. Open the "EVO" software located on the memory card. If you use a MAC computer, click on "EVOMAC" first to create the program for MAC. Then, open the new "EVO" software.



**EVO**  
WindowsApplication1  
1.0.0.0



**EVOMAC**  
Archive WinRAR ZIP  
134 KB

4. You can change the desired settings using the different tabs selection. Note that all these settings can be set via the SPYPOINT LINK app. If you'd like to use your camera in stand alone mode, just turn Off the cellular to use it as a regular trail cam.

To troubleshoot the camera, check the diagnosis message. It will give you the reason why the camera is unable to connect to the LINK app. To understand the diagnosis message, go to p.17 to see the list and what you need to do to fix it.

5. When completed, press "Save settings Adjust date-time" to Exit.
6. Make sure that the "config.cfg" and "config.req" files were created and saved on the memory card before removing it from the computer.




**config.req**  
REQ File  
102 bytes



**config.cfg**  
CFG File  
36 bytes

7. Insert the memory card into the camera.
8. Turn on the camera and it will automatically record the new settings you've saved.

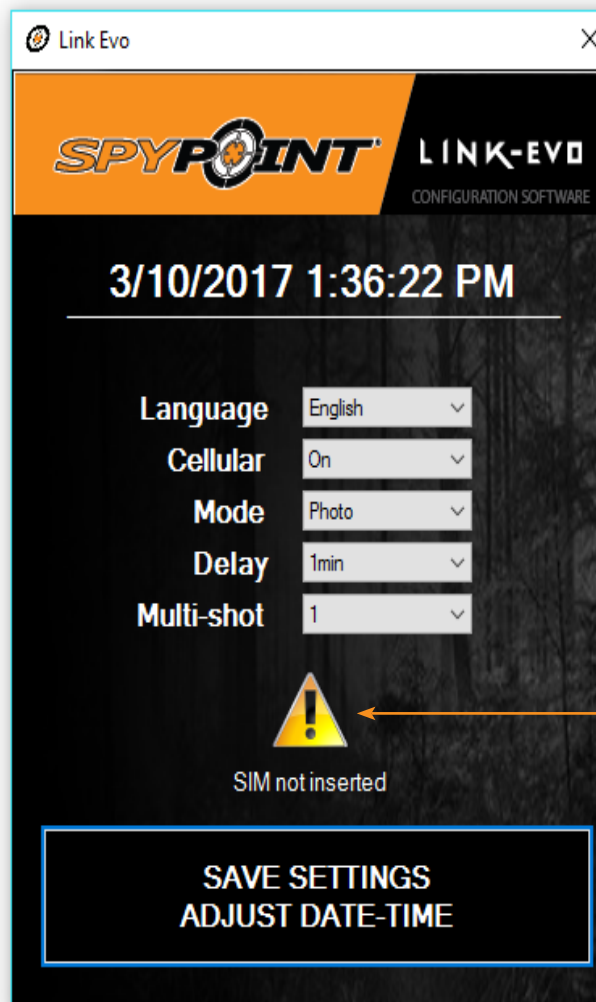


A diagnosis message will appear only if there is an issue.

# SPYPOINT LINK app

# LINK-EVO

When you login in the SPYPOINT LINK app, it will bring you directly to the "Photos" tab. From there, you will be able to see right away the latest photos received as they are sorted by date & time.

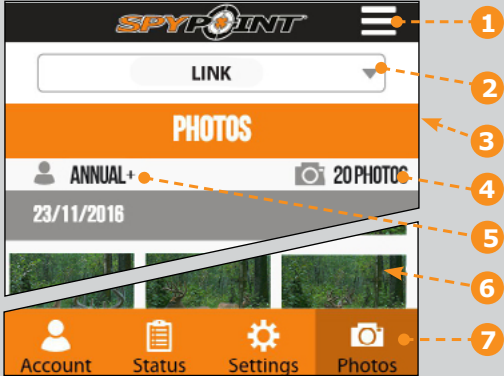

1 Message menu: See important messages, app notifications, change the language & also let you logout of the app.

2 Camera name: Select the camera you want to view or setup.

3 Current tab: Indicate in what tab section you currently are.

4 Nb of picture: Photos uploaded by the camera this month.

5 Plan: Current plan.

6 Photos: Photo list sorted by date & time.

7 Tab selection: Select the tab section you want to choose.

## WIRELESS SETUP OF THE LINK CAMERA

Note that any modifications of the settings through the app will carry over to the camera at the time of its next synch. All the settings in the App are the same one as in the camera. If you're not sure what a setting does, please refer to the next section.

### ACCOUNT

Select the data plan and modify your profile informations.

### DATA PLAN

Select your data plan from Annual, Annual+ or Hunting (3 Months). If you choose not to activate a plan, note that you'll still be able to transmit/receive pictures with our FREE monthly plan. It will allow you to transmit/receive up to 100 photos per month with a photo history of the last 7 days.

## MODIFY YOUR PROFILE INFORMATION

Modify your profile like Password, Name, Address, Phone number & more.



### STATUS

See general informations of the camera.

## LEVELS

See your camera Signal strength, Battery level, SD card space and more.

## GENERAL INFORMATION

See your camera Model, Version, Last communication, Nb of pictures this month, Temperature, Last movement and Battery type.



### SETTINGS

Modify the settings, the synchronisation frequency & others

## BASIC SETTINGS

### Mode - PHOTO

Set Delay, Multi-shot & Camera name.

### Mode - TIME LAPSE

Set Interval.

### Mode - VIDEO

Set Delay, Photo first & Video length.

## SYNCHRONISATION SETTINGS

Set Cellular transmission, First sync time & Sync frequency.

## ADVANCED OPTIONS

Set the Date format, Temp. unit., Night mode and more.



### PHOTOS

See your pictures by date, month and years. It also lets you share or download your photos.

- Scroll up or down to view your photos by date.
- Click on a photo to select it and see it larger.
  - Swipe left to see previous photo or right for the next one.
  - Click on the arrow at the top right of the screen to share the photo on facebook.
  - Leave your finger on a photo to be able to delete it from the App.
  - Swipe up or down to return to the PHOTOS tab & refresh the screen.



## BASIC SETTINGS

### PHOTO MODE

---

**Delay:**  
(Instant/10s/1m/3m/5m/10m/15m/30m)

Allows the user to choose the time interval between each detection before the camera records the next photo. A longer delay minimizes the number of photos taken and maximizes the battery life. A shorter delay maximizes the number of photos taken but requires more battery power. A shorter delay interval is recommended when the camera is used for security purposes.

---

**Multi-shot:**  
(1/2 consecutive shots)

Takes up to 2 consecutive shots at each detection, with a 5-second delay between each photo. This option allows the user to get up to 2 photos when the camera is in PHOTO mode.

---

**Camera name**

Allows to identify the camera clearly. This option is particularly useful for users with more than one camera.

### TIME LAPSE MODE

---

**Interval:**  
(From 3m to 24h)

Allows the camera to take photos at regular preset intervals. For example, if "5m" is selected in the TIME LAPSE mode, the camera takes a photo every 5 minutes even if there is no detection. This option allows the user to obtain photos of game outside the detection range of the camera.

**Note:** The TIME LAPSE mode only applies for photos, not videos. When the TIME LAPSE mode is selected, the DELAY option and the MULTI-SHOT mode are disabled.

### VIDEO MODE

---

**Delay:**  
(Instant/10s/1m/3m/5m/10m/15m/30m))

Allows the user to choose the time interval between each detection before the camera records the next video.

---

**Photo first**

When this option is enabled, a photo is taken immediately before each video.

**Note:** The file name of the photo corresponds to the digit before the video file name. For example, if the name of the photo is PICT001.JPG, the name of the video will be VID001.AVI.

---

**Video length:**  
(10s/30s/60s/90s)

Allows the user to select the duration of the recording when the camera is set in VIDEO mode.

## SYNCHRONISATION SETTINGS

---

### First sync time:

Allows the user to choose at what time of the day the camera communicates for the first time.

### Synchronisation frequency:

Allows the user to choose the number of synchronizations that the camera performs in a day to send pictures.

## ADVANCED OPTION SETTING

---

### Date format: (MDY, DMY)

Allows the user to set the date as Month/Day/Year or as Day/Month/Year.

### Temp. units: (°C/°F)

Allows the user to select the temperature display.

### Night mode:

Allows the user to set the best option for photos.

	OPTIMAL MODE	IR-BOOST MODE
Battery life	★★★★★	★★★★★
Flash range	★★★★★	★★★★★
Blur reduction	★★★★★	★★★★★

### Battery type: (AA/LIT-09/12V)

Allows the user to select the battery type he is using to get a more precise battery level reading

### Schedule:

Allows the user to set the period of operation of the camera for each day of the week. The start and stop time are the hours during which the camera is in action and can record pictures or videos. For an activation of 24 hours, the same start and stop time must be entered

Note: The hours can be recorded over a 12 or 24 hours period. Refer to the «Time format» option.

## OTHER OPTION SETTING

---

### Report stolen:

Allows the user to report that his camera has being stolen.

# Installation & Mounting bracket

## INSTALLATION

### Recommended installation height:

The camera should be installed at the same height as the animal's mid-body.

### Ideal installation for quality pictures & videos:

The targeted animal should be 25 feet / 7.5m away from the camera for a better field of view.

To get brighter pictures at night , you should have elements in the background to reflect back the IR flash to the camera. (e.g. Trees or fence)

Make sure the front of the camera is free of any obstructions. The area of installation should be cleared from branches or bushes. These could be responsible for triggering false detections when combined with heat, reflections and/or wind.

## MOUNTING BRACKET


To remove the camera from the mounting bracket:

1. Push the tab to release the camera from the mounting bracket.
2. Remove the camera.



## INSTALLATION WITH THE SUPPLIED STRAP

Use the mounting bracket or the camera slot for installation strap to fix the camera. The dimensions of the strap (included) is 1" X 60".

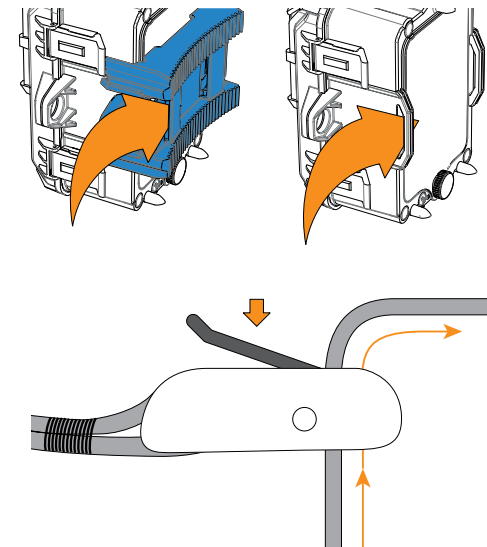

# File transfer to a computer

To transfer photos/videos to a computer:

- Turn OFF the camera.
- Remove the SD card from the camera.
- Insert the SD card into the computer slot, or use a memory card adaptor.
- The computer will detect the card and install the driver automatically.



## For a PC

Click on "My Computer" or «This PC» on your Desktop

Locate your device under "Removable Disk" and then click to access it. Then click on "DCIM" and "100DSCIM" to find all recorded photos and videos.

Select the photos you want to copy. The easiest way is to select them all by clicking on the Home tab and the Select all on the right-hand side. (You can also press Ctrl and the 'A' key, or click the Edit menu and choose select all in other versions of Windows)

Click the Copy icon on the left-hand side of the ribbon (or hold Ctrl and press C). [NOTE: If you don't want to select all photos, hold down the Ctrl key and click on the photos you do want to select before clicking the Copy icon]

Navigate to the folder in which you would like to store your images, or create a new folder by clicking the New Folder button in the ribbon. (You can also press Ctrl-Shift-N together to create a new folder, or right-click in some empty space in the Pictures folder and choose New, then from the next menu: Folder)

Type a name for your new folder, press Enter and then double-click on the folder to open it.

From the Home tab, choose Paste (or hold Ctrl and press V). The photos will be copied into the new folder.

## For a Mac

Click the Finder icon in the Dock.

Locate your device under the Devices tab and then click to access it. Then click on "DCIM" and "100DSCIM" to find all recorded photos and videos.

Click Edit on the toolbar running along the top of the screen and then press Select All to highlight every single images on the device. Select All is also achievable by pressing the ⌘ and A key simultaneously on your keyboard.

Alternatively, if you do not wish to import all, you can individually highlight the images you would like to transfer by holding ⌘ and clicking the file-name.

Click Edit once again and then Copy (or ⌘ and C) to copy the highlighted images.

Navigate to the folder in which you would like to store your images, or create a new folder by right-clicking and pressing CTRL simultaneously, then select New Folder from the menu.

Click Edit and then Paste (or ⌘ and V) to copy your chosen images from your device to the selected folder.

Images may take several minutes to transfer depending on the file size and the amount of images you are importing.

Once your images have transferred, click the Eject icon situated alongside the name of your device and then unplug the device from your Mac.



## Available accessories

# LINK-EVO



**Rechargeable 12V battery, charger & housing kit**  
#KIT-12V, 12-volt 7.0Ah rechargeable battery with a water resistant ABS plastic case, AC charger, 12 ft power cable



**Lithium battery pack & charger**  
#LIT-C-8, Rechargeable lithium battery pack and AC charger with charge indicator light. Fits all SPYPOINT cameras.



**12V DC Power cable**  
#CB-12FT, 12 ft power cable with alligator clips at one end to connect a 12V battery to a camera.



**12-volt Adaptor**  
#AD-12V, AC adaptor (6V to 12V). Powers the camera from an electrical outlet.



**Steel security box**  
#SB-200, Steel box to secure the camera against theft. It also protects it from breakage caused by bears or other animals. Fits all SOLAR 42 LED SPYPOINT cameras.



**Camera mount**  
#MA-360, Adjustable mounting arm, fits all cameras that have a standard 1/4-20" tripod mount. It can rotate 360° and tilt approx +/- 90°. Also available in black.



**Cable lock**  
#CL-6FT, 6 ft cable lock fits all SPYPOINT cameras.



**SD Memory card 16GB**  
#SD-16GB, SDHC UHS-1 memory card 16 GB, ultra high speed Class 10.



Steel security boxes may reduce the wireless functionalities of the product.

To obtain more information on other available accessories, go to  
[www.spypoint.com](http://www.spypoint.com)

## EVO SOFTWARE

Here's the list of possible diagnosis messages from the EVO software with solutions on what to do to fix the issue. Note that you only see a diagnosis message if the camera was not able to connect to the LINK app and that you saw only 1 signal bar flashing on the camera.

Diagnosis message	Possible solutions
Insert memory card	The use of a memory card is required to record photos and videos. <ul style="list-style-type: none"> <li>• If you forget to insert a SD card and tun on the camera, you will receive an SMS alert.</li> </ul>
Card error	The camera cannot access the memory card. <ul style="list-style-type: none"> <li>• Turn off the camera and turn it on again</li> <li>• Turn off the camera, then remove the SIM card and insert it again. The card is inserted correctly when a click is heard.</li> <li>• Verify if the gold contacts are clean.</li> <li>• Format the memory card.</li> </ul>
Error: No SIM card	The SIM card is missing or defective. <ul style="list-style-type: none"> <li>• Turn off the camera and turn it on again</li> <li>• Turn off the camera, then remove the SIM card and insert it again. The card is inserted correctly when a click is heard.</li> </ul>
Error: SIM card	The SIM card is defective. <ul style="list-style-type: none"> <li>• Turn off the camera and turn it on again</li> <li>• Remove the SIM card and insert it again.</li> </ul>

Error: SIM locked	Your SIM card is locked. <ul style="list-style-type: none"> <li>• Contact the SPYPOINT customer service.</li> </ul>
Error: SIM locked (PUK)	Your SIM card is locked and requires a PUK. <ul style="list-style-type: none"> <li>• Contact the SPYPOINT customer service.</li> </ul>
Error: SIM card not supported	<ul style="list-style-type: none"> <li>• The camera must use the SPYPOINT SIM card provided with the camera.</li> </ul>
Error: No service	The SIM card does not detect any signal. <ul style="list-style-type: none"> <li>• Move outside or near a window and re-start the camera a few times if required to get all the informations from the cell network.</li> </ul>
Error: Modem	There has been a communication problem between the camera and the modem. <ul style="list-style-type: none"> <li>• Turn off the camera and turn it on again.</li> </ul>

# Troubleshooting

Issue	Possible solutions
Impossible to turn on the camera	<ul style="list-style-type: none"> <li>• Verify if there are batteries in the camera.</li> <li>• Verify if the batteries are correctly installed.</li> <li>• Install the latest update (available on <a href="http://www.spypoint.com">www.spypoint.com</a> under SUPPORT section).</li> <li>• Replace alkaline batteries or recharge the lithium battery pack.</li> </ul>
The camera does not respond	<ul style="list-style-type: none"> <li>• Remove the batteries and reinstall them.</li> <li>• Replace alkaline batteries or recharge the lithium battery pack.</li> </ul>
Impossible to take photos/videos	<ul style="list-style-type: none"> <li>• Verify if there are batteries in the camera.</li> <li>• Replace alkaline batteries or recharge the lithium battery pack.</li> <li>• Verify if the camera is turned on.</li> </ul>
Red light in front of the camera blinks	<ul style="list-style-type: none"> <li>• Camera is set in PHOTO or VIDEO mode. The red light in front of the camera flashes for 30 seconds to allow the user to leave without being photographed or recorded.</li> </ul>
Camera takes black photos / videos	<ul style="list-style-type: none"> <li>• Verify the battery level to see if battery power is full as the flash will stop operating near the end of the battery life especially if you're doing a video.</li> <li>• Verify that there's something within the flash range to reflect the infrared back to the camera.</li> <li>• If you're unsure if the flash is working properly, test the camera in a dark room to see if you're able to have black &amp; white pictures or videos.</li> </ul>

Photos / videos appear dark at night	<ul style="list-style-type: none"> <li>• For best results, make sure the subject is within the ideal flash range. Subjects may appear too dark at greater distances.</li> </ul>
No person/animal on photos	<ul style="list-style-type: none"> <li>• Sunrise or sunset can trigger the sensor. Camera must be re-orientated.</li> <li>• At night, the motion detector may detect beyond the range of the IR illumination. Reduce sensibility setting.</li> <li>• Motion detector may detect animals through foliage.</li> <li>• If a person or animal moves quickly, it may move out of the camera's field of view before the photo is taken. Move the camera further back or redirect the camera.</li> <li>• Make sure the mounting post or tree is stable and does not move.</li> </ul>

## SIT BACK, RELAX & KNOW YOU'RE COVERED



This SPYPOINT product designed by GG Telecom, is covered by a two (2) year limited warranty on material and workmanship starting from the original date of purchase. The electronic sales receipt is the client's proof of purchase and must be presented if warranty service is needed. This warranty will be honored in the country of purchase only.

This GG Telecom warranty does not apply to: (a) consumable parts, including but not limited to batteries, which performance is designed to decrease over the course of time; (b) damage caused by misuse, use with another product, neglect, accidents, liquid contact, fire, earthquake or any other external cause; (c) GG Telecom products that have been purchased online from an unauthorized dealer; (d) products that have had any modification or tampering; (e) cosmetic damage including but not limited to scratches and broken plastic; (f) damage caused by operating the GG Telecom product outside of GG Telecom's recommendations.

## INSTRUCTIONS FOR REPAIR SERVICE

GG Telecom will repair the product or replace it at its discretion with an equivalent product without charge if covered by the warranty described previously. The shipping fees for an item sent will be assumed by the customer. GG Telecom will then pay for the return of the product covered by the warranty.

For a product not covered by the warranty, the repair will be subject to a reasonable charge and the customer will also assume all shipping costs.

**IMPORTANT: Under no circumstances will GG Telecom accept returned products without a RMA number. (Return Material Authorization) It is essential to contact GG Telecom before making a return.**

1. Before sending a product for repair, please contact GG Telecom technical support team at 1-888-779-7646 or support@spypoint.com as most issues can be solved over the phone or by email.
2. If a product needs to be sent, a RMA number will be given to authorize the return of the product and for future reference.
3. The original receipt or a copy must be sent along with the package.
4. The RMA number must be written on the outside of the package and sent to:

CANADA  
GG Telecom  
120 J.Aurèle-Roux  
Victoriaville, QC  
G6T 0N5

United States  
GG Telecom  
555 VT route 78  
Swanton, VT 05488

The customer is liable for loss or damage to the product that may occur during the transport to GG Telecom. We recommend the use of a traceable method of shipping to ensure protection.

[WWW.SPYPOINT.COM](http://WWW.SPYPOINT.COM)

## FCC REGULATIONS



FCC Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.